



INSTALLATION INSTRUCTIONS

'15+ CHEVY TAHOE

CB4 PRISONER CARGO BARRIER

475-0863
475-0988


Before beginning the installation, confirm that you have received all of the parts for your package.
Read the instructions completely before starting installation.

Parts Included:


- Hardware Bag With Necessary Nuts, Bolts, Etc.

TOOLS NEEDED:


- Ratchet
- 1/2" Socket
- 18 mm Deep Well Socket
- 3/16 Hex Key Socket

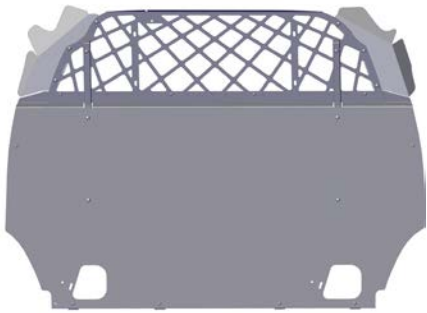

475-0863

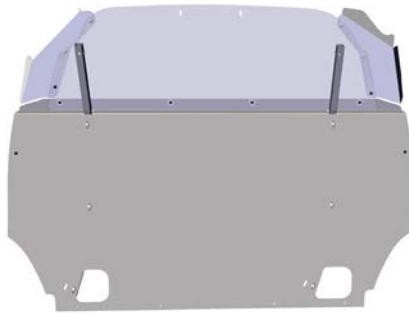


475-0988

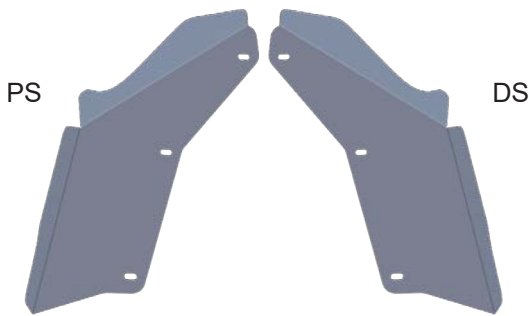

Side Poly Wings



Outer Mount Brackets

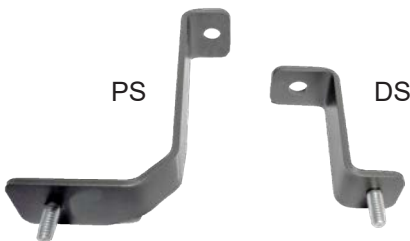

Inner Mount Brackets



Support Tubes



Headliner Bracket
(475-0988 ONLY)



Lower Mount Brackets



Wire Brackets



INSTALLATION INSTRUCTIONS



On C Pillar, pop cover using a small flathead screwdriver. This exposes a 7 mm screw, remove screw. Then pull upper C pillar trim away from vehicle frame. **Repeat for other side.**



Remove upper and lower C pillar seat belt bolts using a T50 socket. **Repeat for other side.**



Remove the upper inside rear hatch trim (along the rear roof line) by pulling away from OEM frame.




On D pillar, pop cover using a small flathead screwdriver. This exposes a 7 mm screw, remove screw. Then pull upper D pillar trim by away from vehicle frame. **Repeat for other side.**



Expose bolt under cargo strap hook by prying cover off with a small flathead screwdriver. Remove T40 bolt. **Repeat for other side.**



Remove the lower inside hatch trim (along the floor) by pulling away from frame.

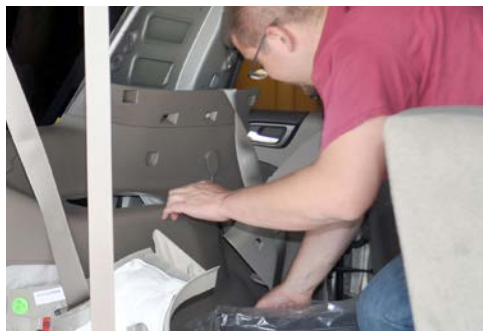

Pry away from OEM frame, the large lower trim piece that goes between C and D Pillar under window. **Repeat for other side.**



With lower trim removed, drill 1/2" hole into center indentation in trim as shown above. **Repeat for other side.**

Driver Side



Use provided template, mark AVK hole location. Install AVK using directions on back page.



INSTALLATION INSTRUCTIONS

Passenger Side



Once finished with AVK, install D/S Inner Mount Bracket.



Reinstall lower OEM trim piece with Inner Mount Bracket stud sticking through drilled hole of trim.



Use provided template, mark AVK hole location. Install AVK using directions on back page.



Once finished with AVK, install P/S Inner Mount Bracket.



Reinstall lower OEM trim piece with Inner Mount Bracket stud sticking through drilled hole of trim.



Reinstall all remaining OEM trim.



Attach Lower Mount Brackets onto Lower Steel Barrier.



Flip second row seating up towards front seats. Then flip carpet/rubber mat to expose (4) OEM nuts. Remove nuts using a 18mm socket.



Install Lower Steel Barrier into vehicle.




INSTALLATION INSTRUCTIONS




Place Lower Steel Barrier onto OEM studs, secure barrier by tightening OEM nuts.



Loosely attach Outer Mount Brackets to Lower Steel Barrier using button head cap screws (1 per side). Then slide Outer Mount Bracket over exposed studs from Inner Mount Brackets. Secure using provided nylock nuts.

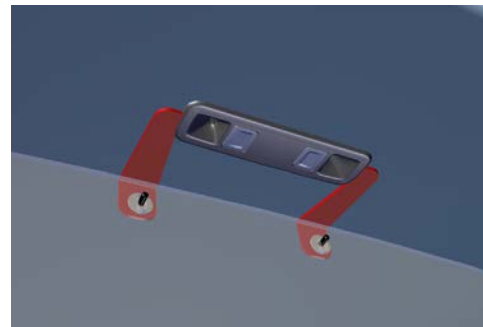


Unclip headliner light housing. Install Headliner Bracket (475-0988 only).

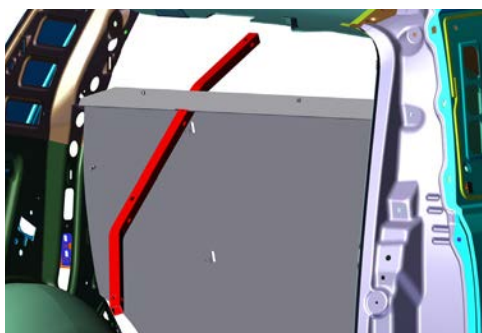


Place support tubes into Lower Steel Barrier from the front of vehicle. Loosely secure Support Tubes using provided carriage bolts and lock nuts (2 per side).


NOTE: When inserting tubes, place letter at top of tube. Use "S" for Secure Grid and "P" for Poly Window.

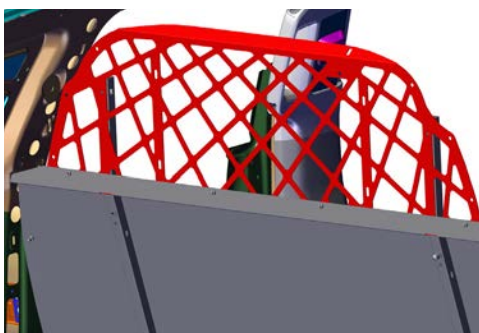


Install from second row seats. Place Upper Secure Grid in between Support Tubes and channel of Lower Steel Barrier.

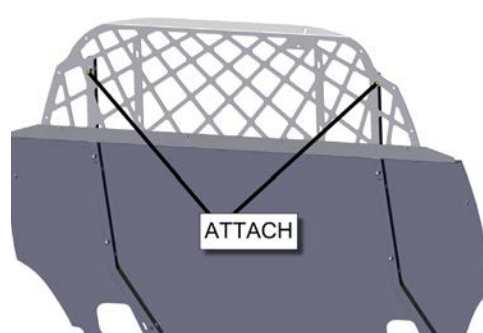

Secure Support Tubes to Secure Grid with provided hardware.

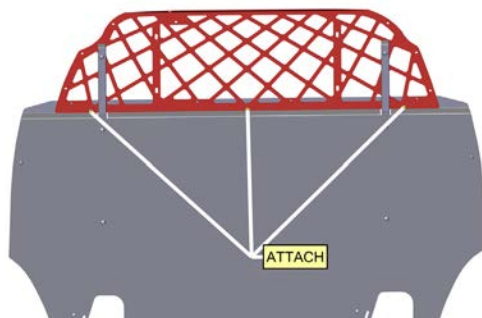

From rear seat of vehicle using button head cap screws. Secure Upper Secure Grid to Lower Steel Barrier. Tighten all hardware at this time.

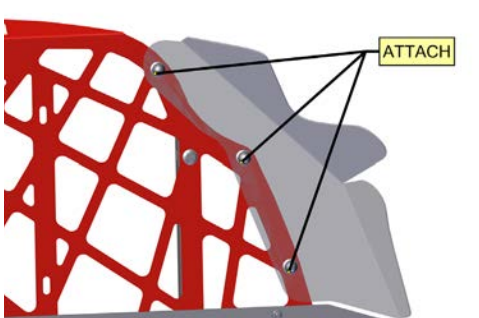

Install through rear of vehicle Side Poly Wings and secure using (3) carriage bolts and flange nuts.

1. Drill out existing hole to 1/2" or drill new hole per installation instructions. *(Pic A)*
2. Place 5/16-18 x 1.5" long bolt through the 3/8" flange nut and hand thread bolt into the AVK fastener. *(Pic B)*
3. Place into 1/2" drilled hole *(Pic C)* and use 9/16" Box End Wrench to secure the flange nut. *(Pic D)* Apply pressure on the flange nut, pressing AVK fastener into hole. Using an air wrench, tighten the 5/16-18 x 1.5" bolt. *(Pic E)* This will allow the AVK fastener to secure onto the backside of the metal. Remove 5/16-18 x 1.5" bolt. *(Pic F)*
4. Follow installation instructions from this point forward.



A



B



C



D



E









F

Installation video can be viewed at :

<http://jottopublicsafety.gojotto.com/additional-categories/downloads.html>



1/2" HOLE
FOR AVK

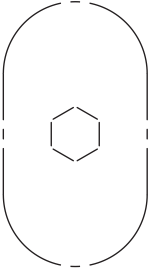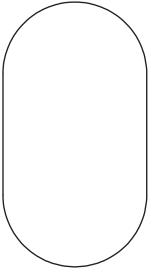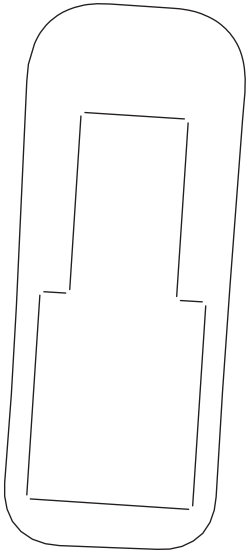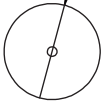

1/2" HOLE
FOR AVK

PASSENGER SIDE AVK HOLE TEMPLATE PRINT 1:1

DRIVER SIDE AVK HOLE TEMPLATE PRINT 1:1

